
XRAY NT1'26
CONVERSION SET

2. REAR SUSPENSION

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

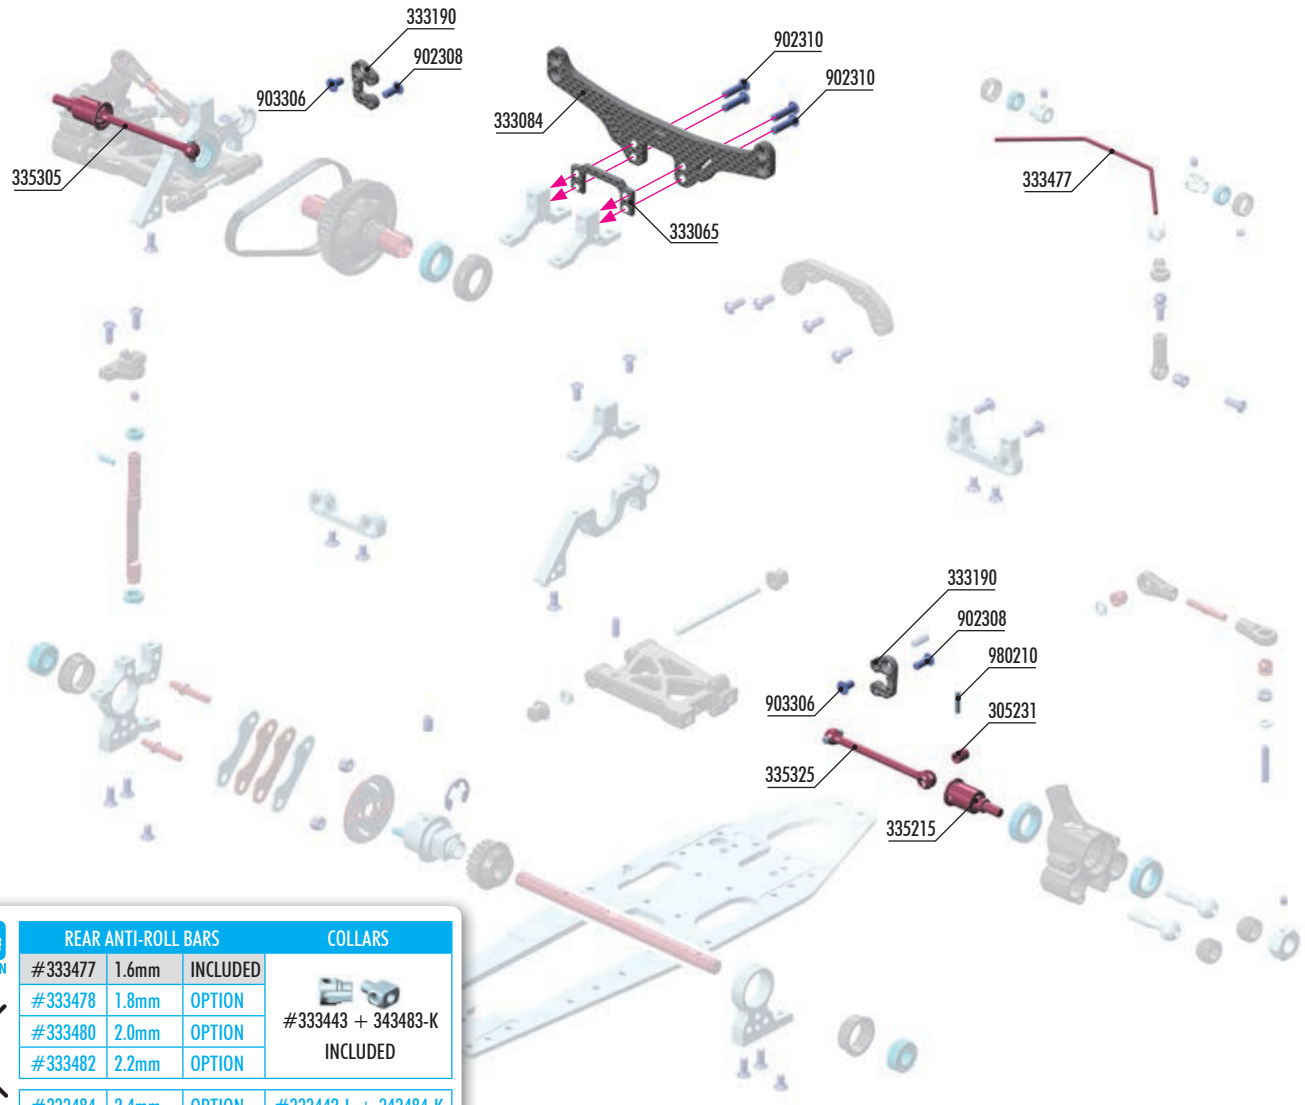

OPTION


REAR ANTI-ROLL BARS			COLLARS
#333477	1.6mm	INCLUDED	#333443 + 343483-K INCLUDED
#333478	1.8mm	OPTION	
#333480	2.0mm	OPTION	
#333482	2.2mm	OPTION	
#333484	2.4mm	OPTION	#333442-L + 343484-K
#333486	2.6mm	OPTION	#333442-L + 343482-K

BAG 02

305231	DRIVE SHAFT COUPLING - HUDY SPRING STEEL™	335325	CVD DRIVE SHAFT - REAR - HUDY SPRING STEEL™
333065	CARBON ROLL-CENTER SPACER		
333084	NCARBON SHOCK TOWER REAR - 1 DOT	902308	HEX SCREW SH M3x8 (10)
333190	REAR ARM CARBON EXTENSIONS FOR SHOCK ABSORBERS (L+R)	902310	HEX SCREW SH M3x10 (10)
333477	ANTI-ROLL BAR FOR BALL-BEARINGS - REAR 1.6mm - V2	903306	HEX SCREW SFH M3x6 (10)
335215	CVD AXLE - SUPER LIGHT - HUDY SPRING STEEL™	980210	PIN 2x10 (10)
335305	CVD DRIVE SHAFT - REAR - SET - HUDY SPRING STEEL™ (1)		

Numbers in parentheses ( ) refer to quantities when purchased separately.


2x 980210 P 2x10

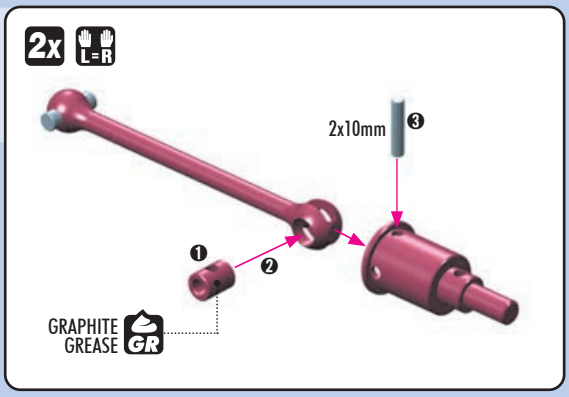

2x 901308 SB M3x8


2x 902308 SH M3x8


2x 903306 SFH M3x6

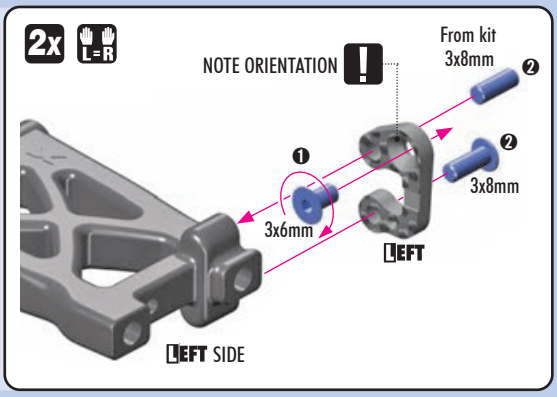


4. FRONT SUSPENSION

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

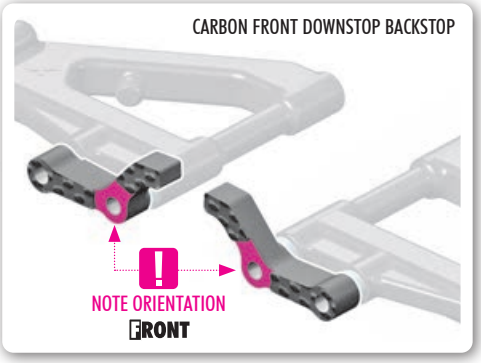

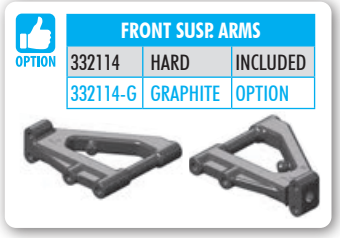

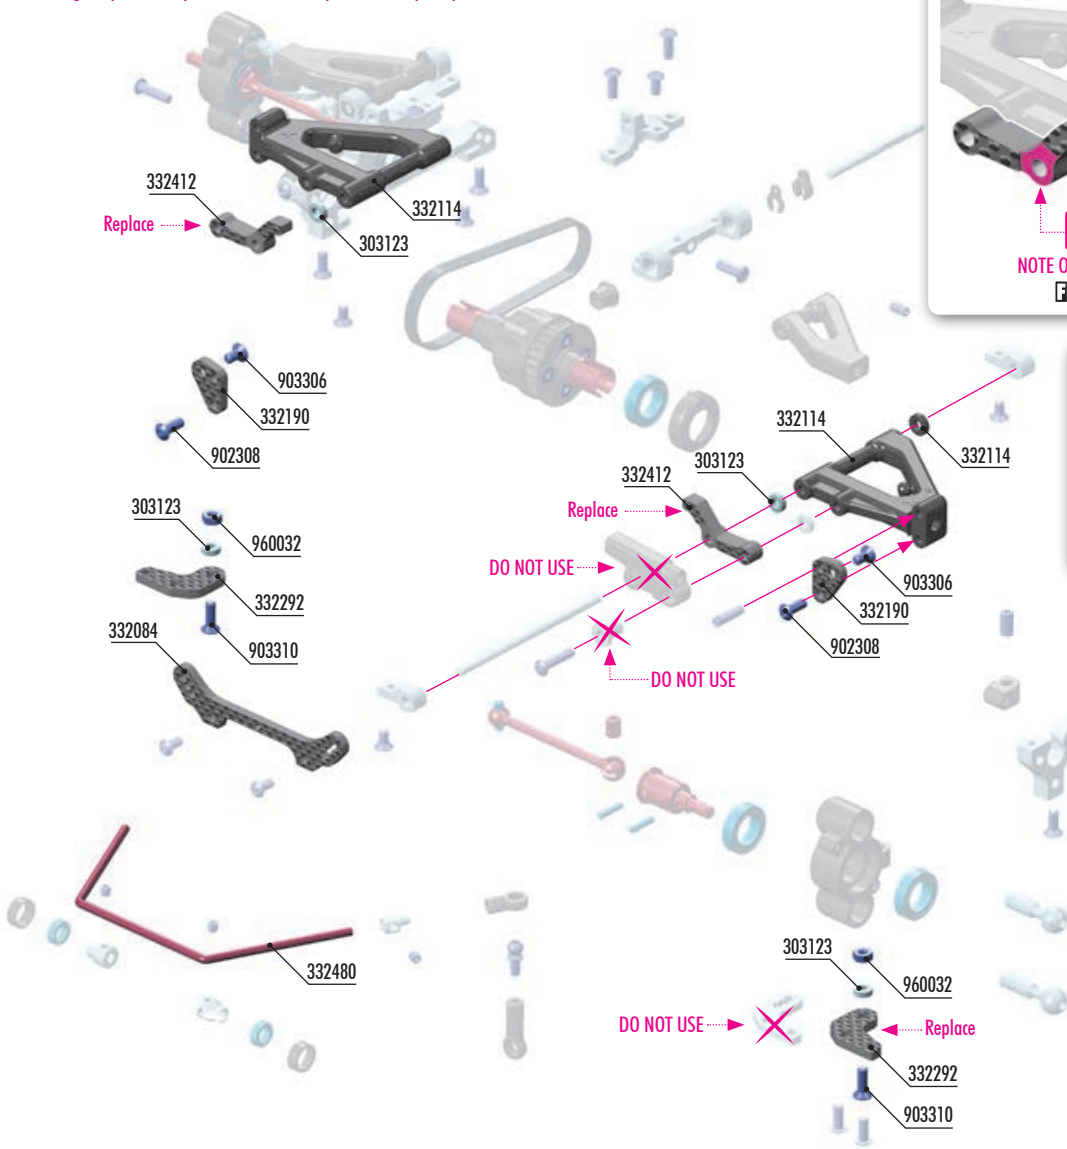


BAG 04


303123	ALU SHIM 3x6x2.0mm (10)	332480	ANTI-ROLL BAR FRONT 2.0mm
332084	CARBON SHOCK TOWER FRONT - 1 DOT		
332114	COMPOSITE SUSPENSION ARM FRONT LOWER FOR CARBON EXTENSION - HARD	902308	HEX SCREW SH M3x8 (10)
332190	FRONT ARM CARBON EXTENSIONS FOR SHOCK ABSORBERS (L+R)	903306	HEX SCREW SFH M3x6 (10)
332292	STEERING BLOCK CARBON EXTENSIONS - 2 DOTS (L+R)	903310	HEX SCREW SFH M3x10 (10)
332412	CARBON FRONT DOWNSTOP BACKSTOP (L+R)	960032	NUT M3 - BLACK (10)

Numbers in parentheses ( ) refer to quantities when purchased separately.




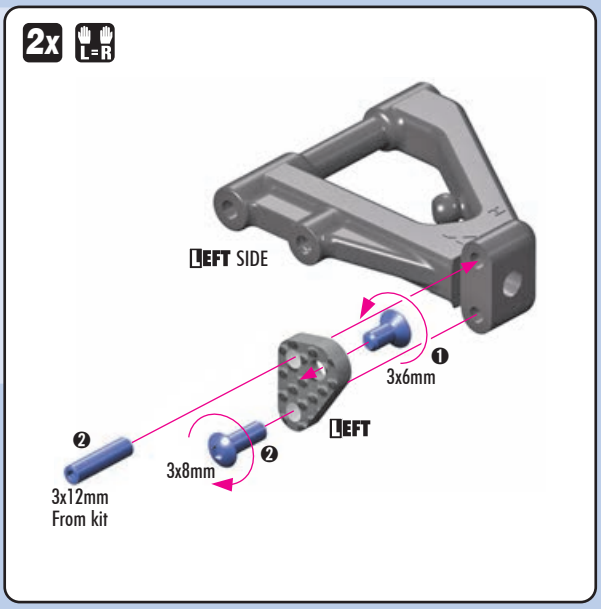



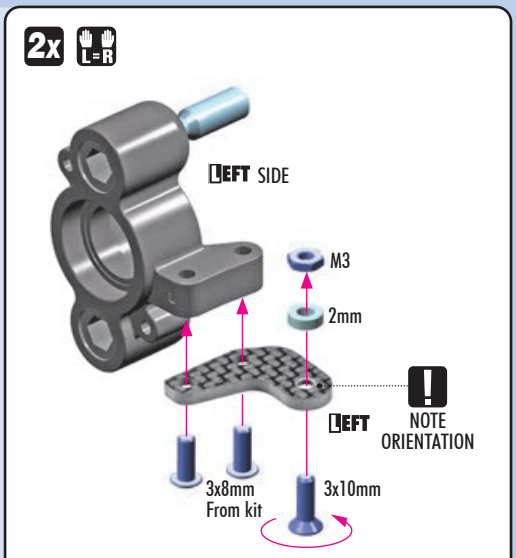

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

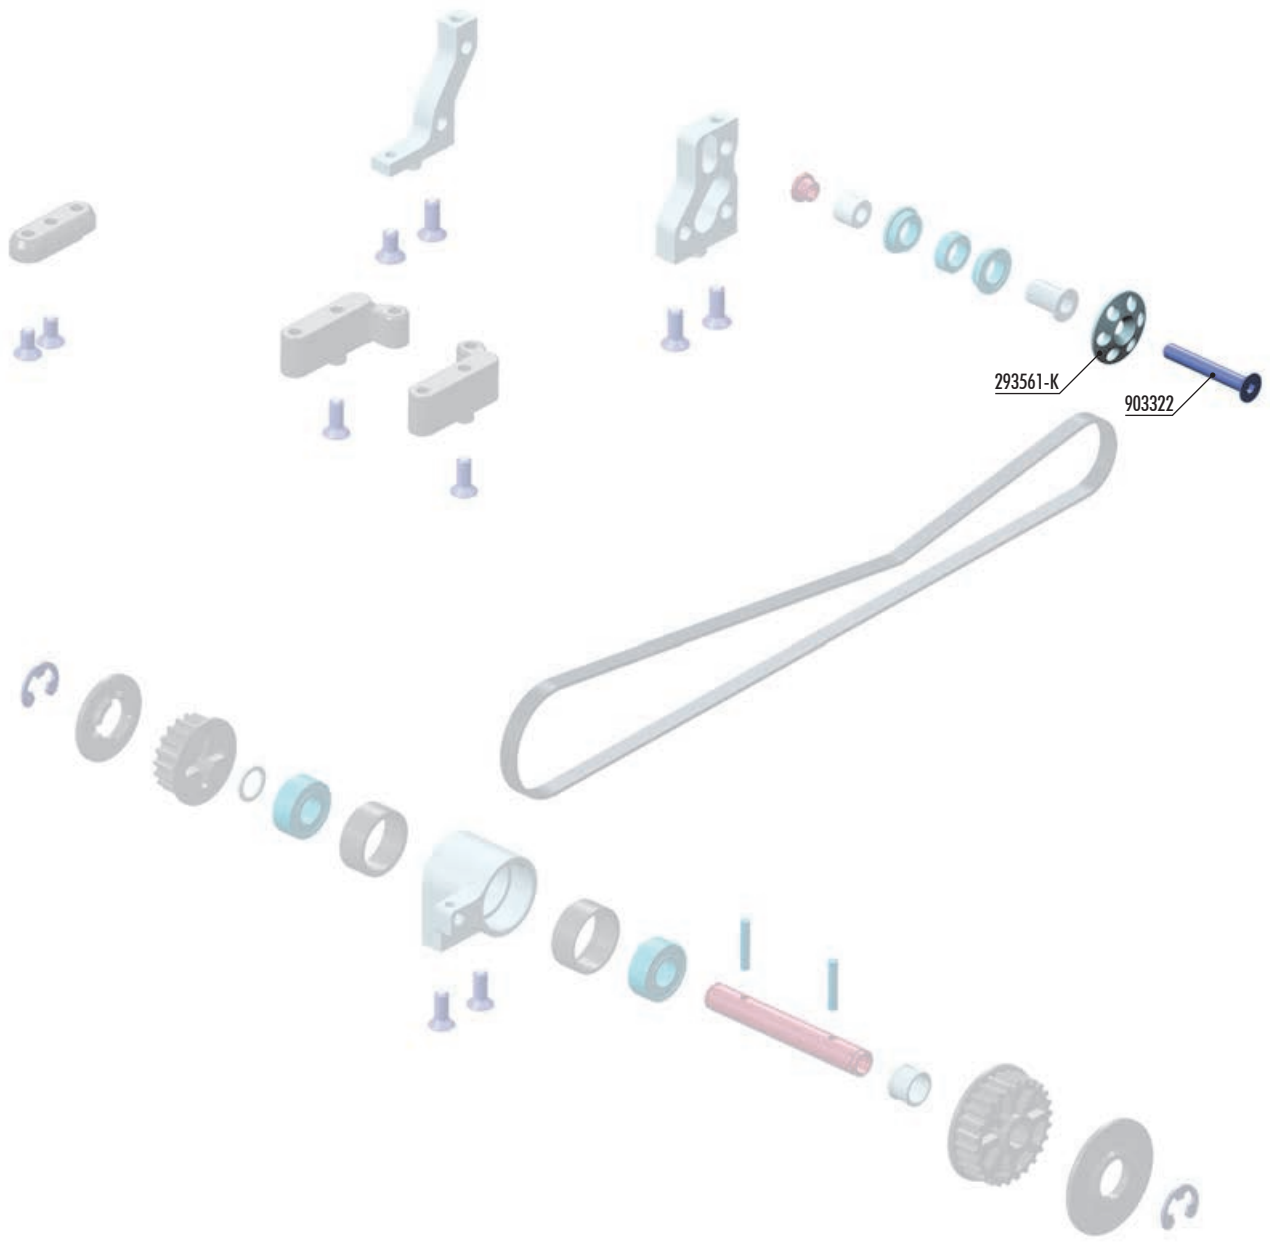


BAG 05

293561-K	HUDY ALU REAR WING SHIM - BLACK (2)	903322	HEX SCREW SFH M3x22 (10)

Numbers in parentheses ( ) refer to quantities when purchased separately.

8. ENGINE & CLUTCH

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

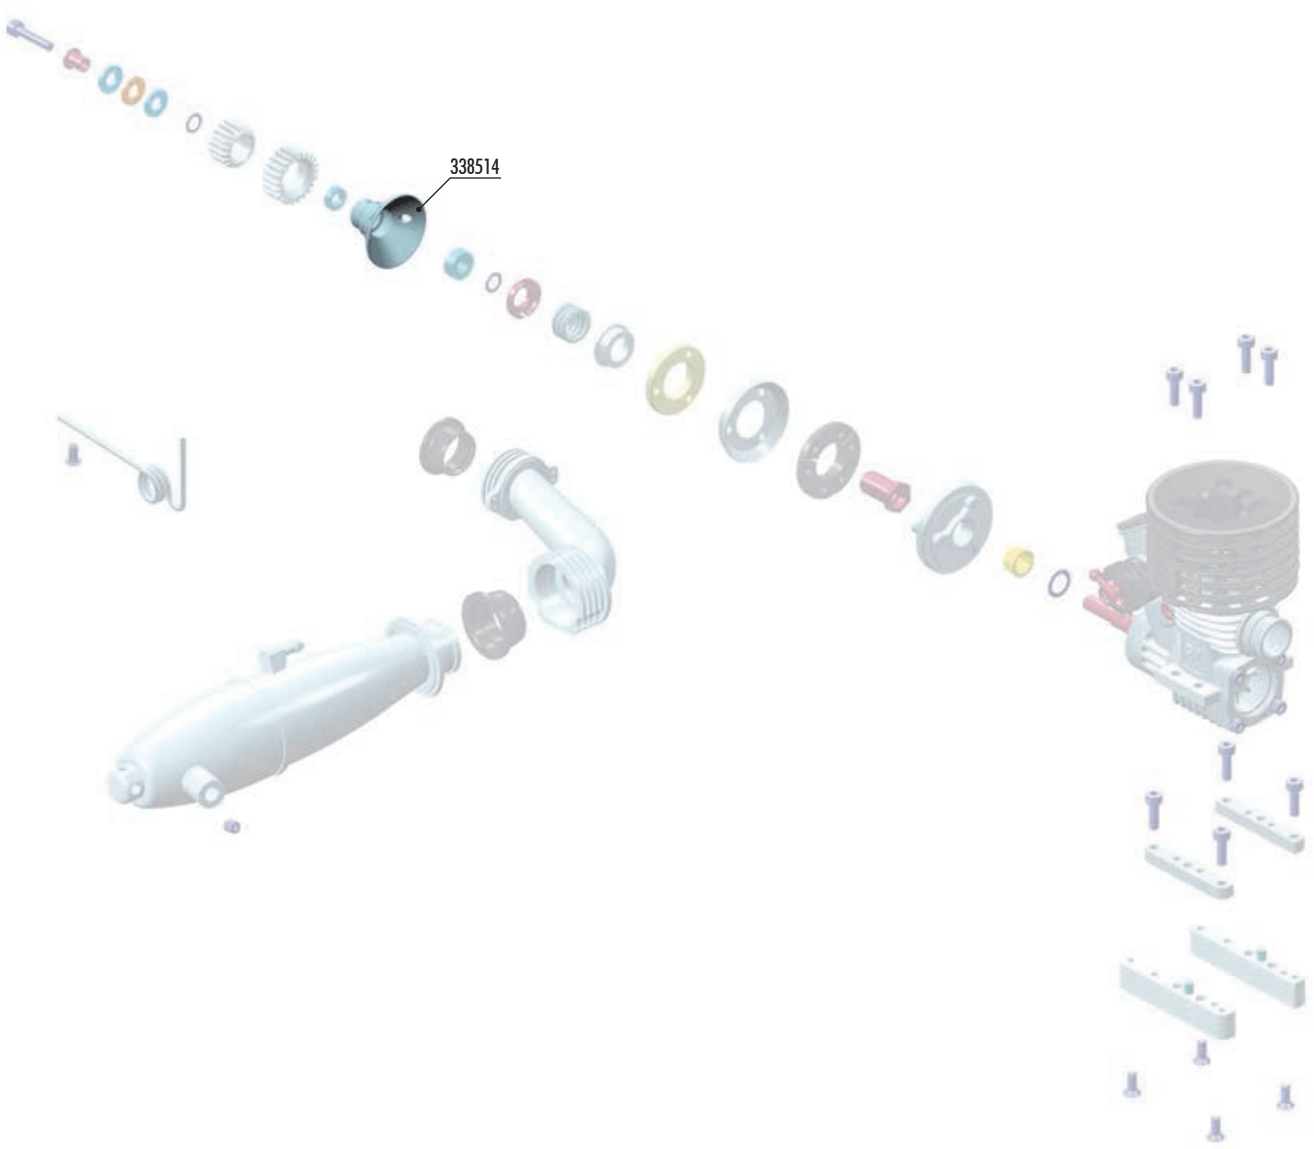


BAG 08

338514 XCA ALU NICKEL COATED CLUTCHBELL - HIGH DYNAMIC

Numbers in parentheses ( ) refer to quantities when purchased separately.

9. CARB LINKAGE & BODYMOUNTS

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

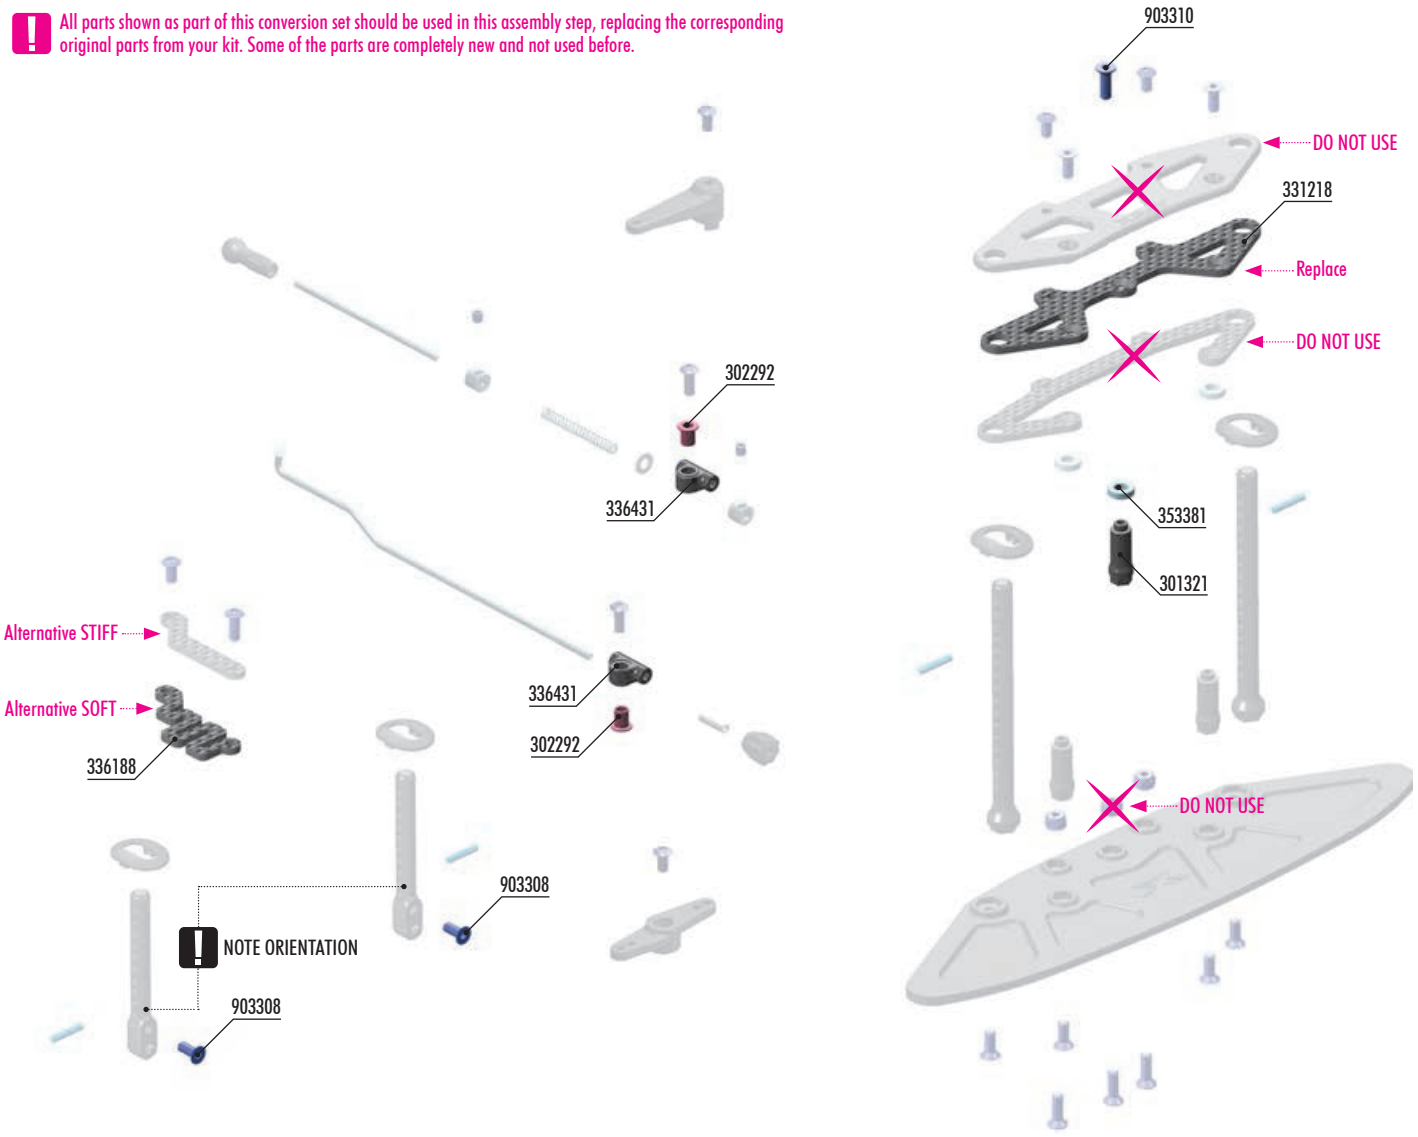



BAG 09

301321	COMPOSITE BRACE FOR BUMPER (2)	903308	HEX SCREW SFH M3x8 (10)
302292	STEEL STEERING BUSHING LONG (4)	903310	HEX SCREW SFH M3x10 (10)
331218	CARBON FRONT UPPER HOLDER		
336188	CARBON REAR WAVE STIFFENER 2.2mm		
336431	COMPOSITE BRAKE/THROTTLE SERVO ARM PIVOT (2)		
353381	ALU SHIM 4x7.5x2 (4)		

Numbers in parentheses ( ) refer to quantities when purchased separately.



1x 901303 SB M3x3


2x 902310 SH M3x10

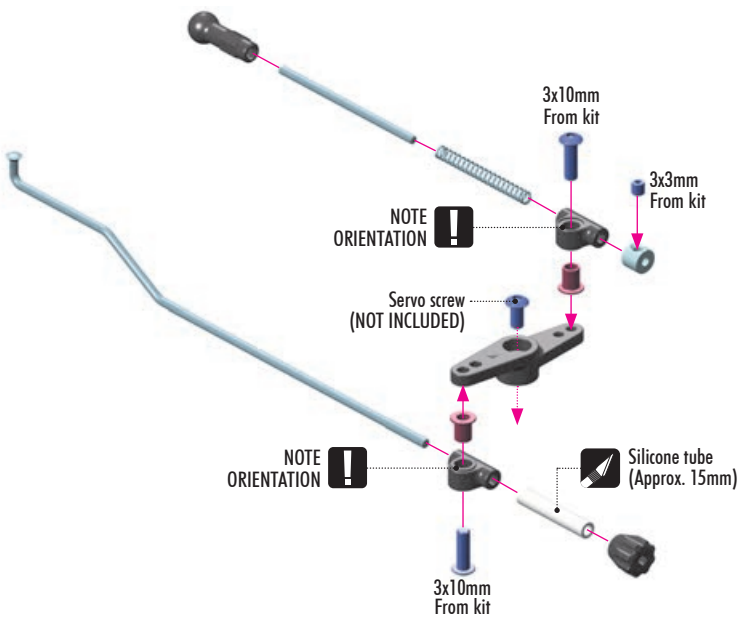

10. SHOCK ABSORBERS

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

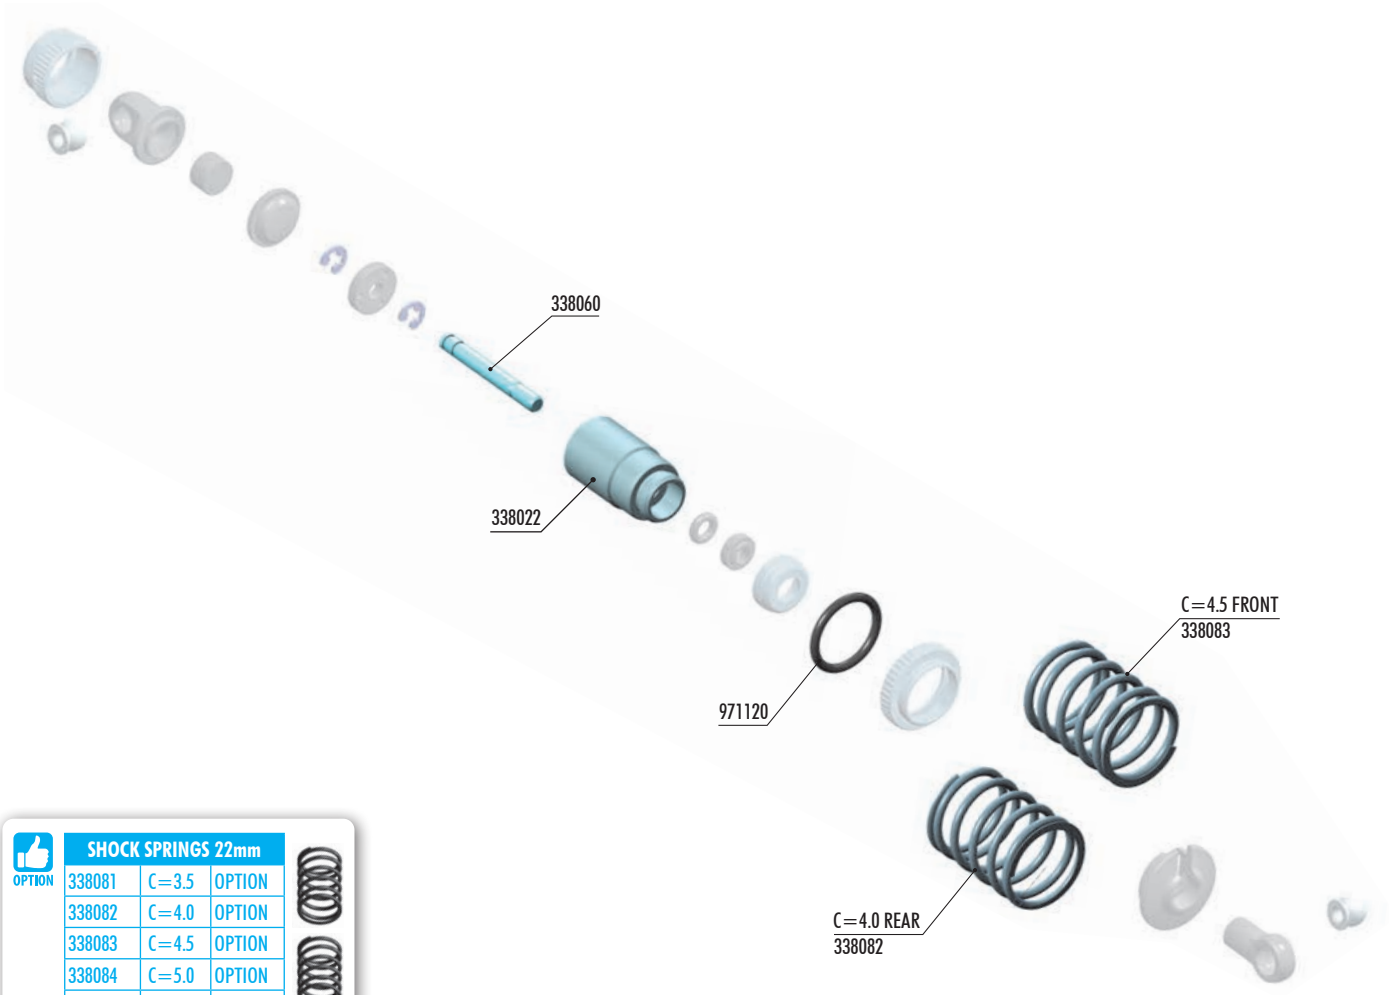

OPTION

SHOCK SPRINGS 22mm		
338081	C=3.5	OPTION
338082	C=4.0	OPTION
338083	C=4.5	OPTION
338084	C=5.0	OPTION
338085	C=5.5	OPTION


BAG 10

338022 ALU SHOCK BODY 20.8mm (2)
338060 HARDENED SHOCK SHAFT (2)
338082 XRAY 3S SPRING-SET C=4.0 (2)
338083 XRAY 3S SPRING-SET C=4.5 (2)
971120 O-RING 12x1.6 (10)


Numbers in parentheses ( ) refer to quantities when purchased separately.




INITIAL SETTING
FRONT & REAR

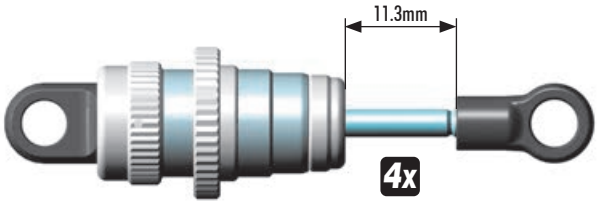

All parts shown as part of this conversion set should be used in this assembly step, replacing the corresponding original parts from your kit. Some of the parts are completely new and not used before.

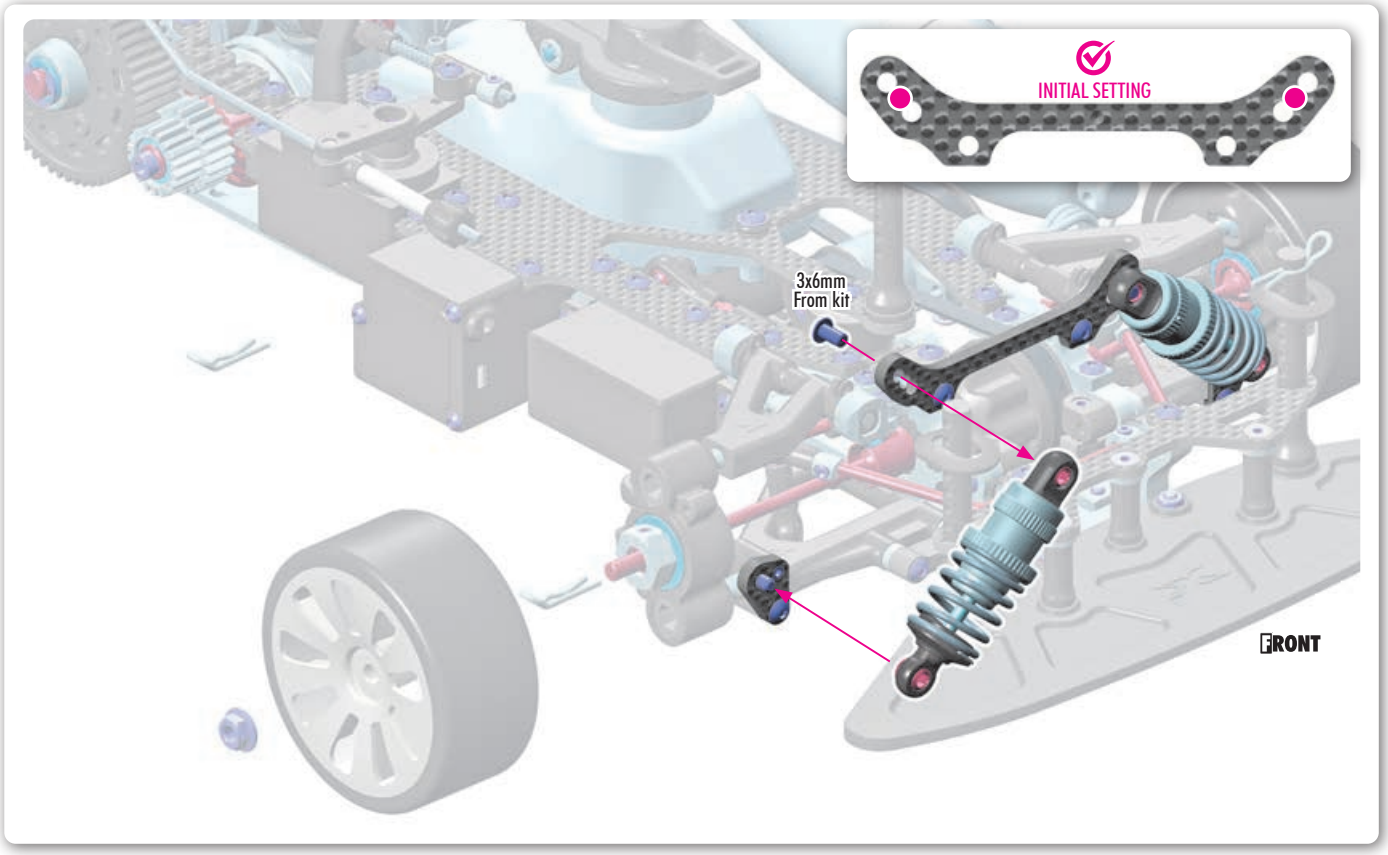

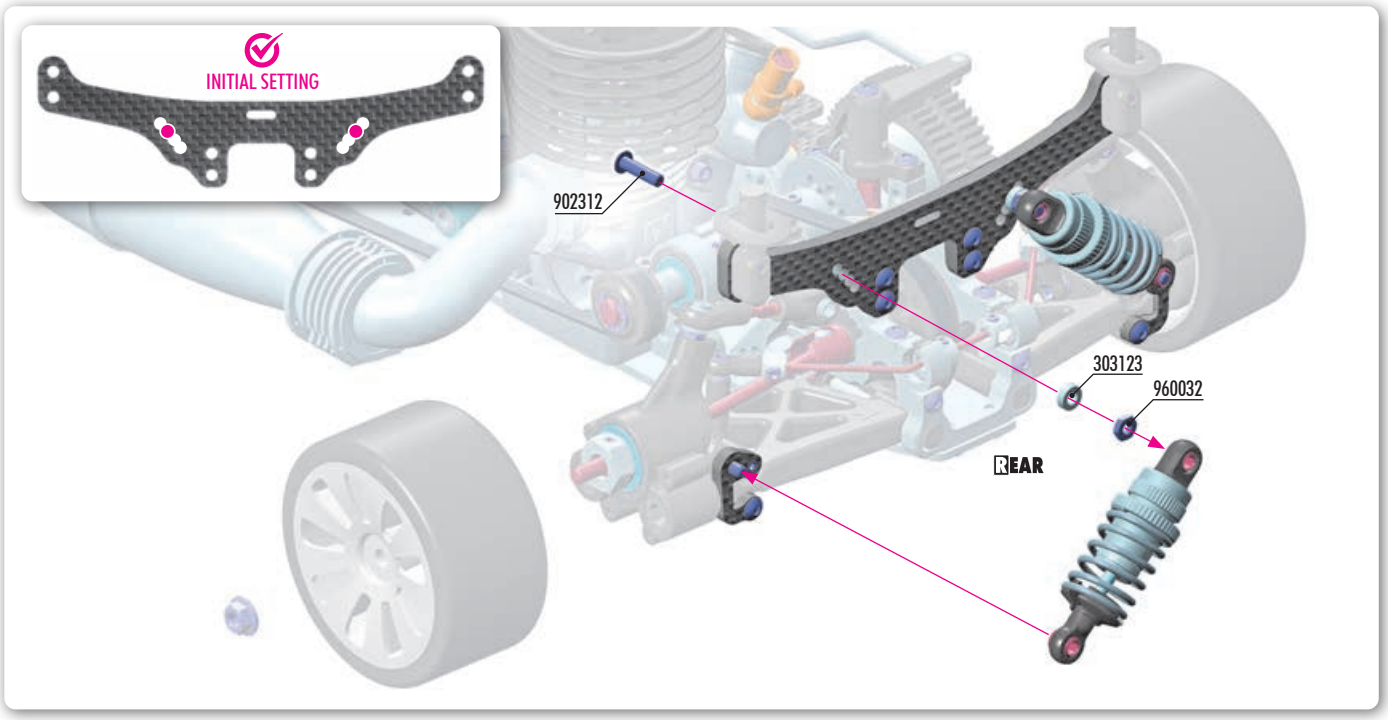

BAG 09

303123	ALU SHIM 3x6x2.0mm (10)	902312	HEX SCREW SH M3x12 (10)
		960032	NUT M3 (10)

Numbers in parentheses ( ) refer to quantities when purchased separately.

ASSEMBLY VIEW

